Manual

1 Place the covers

- Start at the front of the pit.
- Place the sheets with straps over one wall and the sheets with buckles over the opposite wall.
- Place the PVC pipe on the ground. The red line should be on your right when you stand in the pit.





- Connect the PVC pipes.
- Make sure the sheets overlap by approximately 25 cm. The black lines should overlap and the PVC pipe should be completely enclosed inside the sleeve.





Watch the instruction video

Scan the QR code to watch the video.

2 STOP

Before you continue!

- The sleeves in the sheets, which the pipes run through, must be open on the wall side.
- This ensures that the straps and buckles are on top of the covers when covering the pit.



3 Position the plastic

- Make sure the plastic is long enough: after filling, it must cover the full width of the pit.
- Leave at least 20 cm of plastic on the floor.



4 Filling the pit

- Start shaping the silage into a rounded profile early. Do not wait until the last loads.
- Fill at least 60 cm of silage.
- Compact the silage thoroughly.
- Silage not getting a nice rounded top? Then try driving over it crosswise.

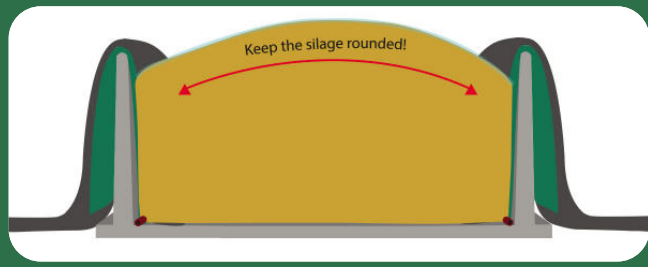

5 Covering the pit

- Pull the plastic over the silage.
- Lay the sheets over the silage.
  Start at the back. *Strong wind? Tip on the back*
- Connect the straps to the buckles and pull them tight by hand. *Straps too short? Tip on the back*

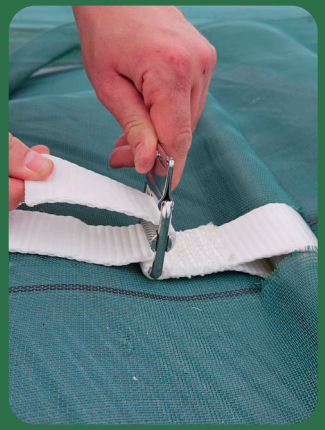



- Tighten with the stainless steel tensioner.
- Connect the red PVC to the end of the grey PVC.
- If needed, retighten the straps after a few weeks.

Feeding out

- To release: pull the strap back over the buckle.
- Keep sufficient, continuous pressure behind the silage face to stop wind getting in.







Storing the covers

- Roll up each sheet starting from the steel pipe, keeping the sleeves on the inside.





- Place the sheets back in the storage rack.
- Make sure the sheets with straps are kept separate from the sheets with buckles.



Take a photo!
Send us a photo of the finished result!

Tips

Strong wind?
First secure one sheet at the front, one in the middle and one at the back. Then lay the rest, starting at the back.

Straps too short?
Move the steel pipes to another sleeve, but only on the buckle side. Moving only one side saves half the time. The straps and buckles don't need to meet in the middle of the pit.

Questions?

Call your contact person or 0031 514 745050.

Silage Safe

EN